WEATHERX

USER'S GUIDE
V:1609-1220-11

WR182R

NOAA Weather & AM/FM Radio

For the most up-to-date version of this User's Guide, go to **www.weather-x.net**

Warnings and Precautions

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ***PRÉCAUTION:*** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS****: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOAA Weather & AM/FM Radio

Features

- Instant NOAA weatherband
- AM/FM Radio (direct tuning)
- LED flashlight
- Mobile phone charger
- Dynamo hand-crank power
- Telescopic FM antenna
- Built-in AM antenna
- DC battery power: built-in rechargeable NiMH battery
- DC battery power: requires 3 AA batteries (not included)

Included

- DC Charging Cable with Connectors (female USB, Micro-USB, Mini-USB)

Table of Contents

NOAA Weather & AM/FM Radio **4**
- Features
- Included

Table of Contents. **5**

Introduction **6**

Setup **8**
- Battery Power
- Dynamo Hand-Crank
- AC Power

Radio **9**
- Playing the AM/FM Radio
- Radio Reception

Weatherband **10**
- Playing Weatherband

Charging **11**
- Charging a Device
- Charging the Internal battery with the Dynamo Hand Crank
- Charging the Internal Battery with an AC Adapter

Company Information **12**
- International Support
- Contact Information
- Green Initiative

Introduction

Flashlight
Adjust the switch to turn the flashlight on or off.

Tuning
Adjust the dial to tune the radio.

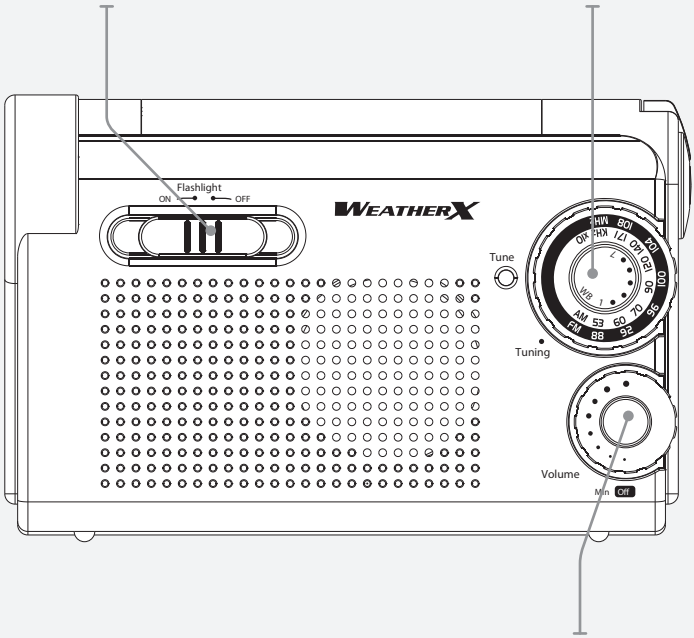

Volume
Adjust the dial to turn the radio on and turn the volume up or down.

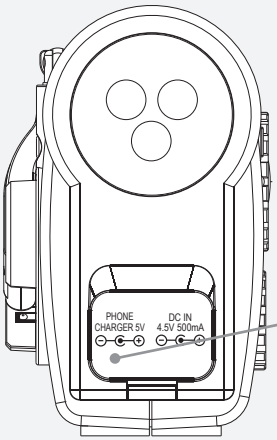

Phone Charger

Power
Adjust the switch to switch between rechargable and AA battery modes.

Dynamo Hand Crank

Telescopic FM Antenna

Dynamo LED
Indicates if the unit is charging.

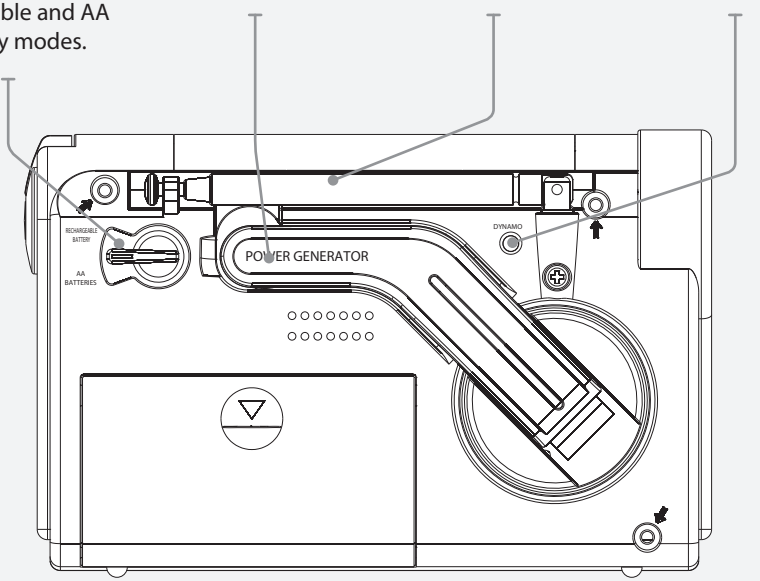

WB/AM/FM
Adjust to switch between WB, AM and FM radio modes.

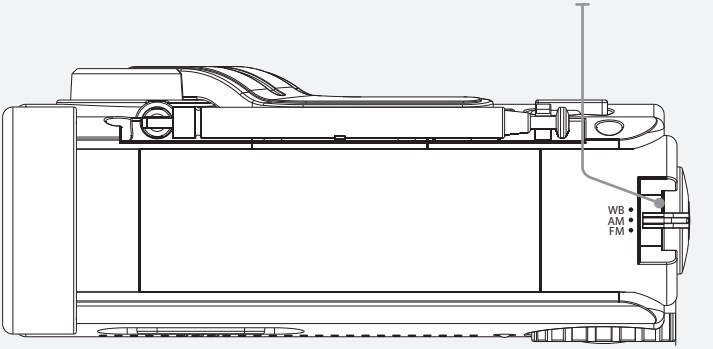

Setup

Battery Power

Requires 3 AA batteries (not included).

1. Set the **Power** switch to AA Battery mode.

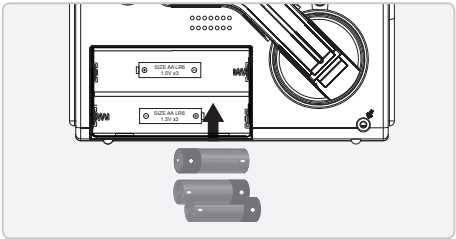

Dynamo Hand-Crank

1. Set the **Power** switch to Rechargable mode.
2. The unit can now be powered by the **Dynamo Hand-Crank**.

Note: Using the Dynamo Hand-Crank will recharge the internal battery or slowly charge connected devices.

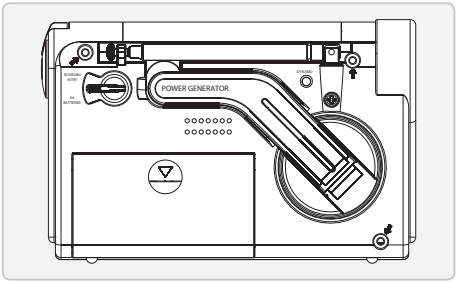

AC Power

To power the unit, plug in a DC 4.5V output 500mA anode pole adapter (not included) into a standard AC outlet.

Radio

Playing the AM/FM Radio

1. Adjust **WB/AM/FM** switch to the AM or FM position.
2. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
3. Adjust the **Tuning** dial to tune the radio.

Radio Reception

Adjust the position of the **Telescopic FM Antenna** to improve FM radio reception.

An AM antenna is built into the unit. To improve AM radio reception, adjust the position of the unit.

Weatherband

Playing Weatherband

1. Adjust **WB/AM/FM** switch to the WB position.
2. Turn the **Volume** dial to turn on the radio and adjust to the desired volume.
3. Adjust the **Tuning** dial to tune one of the seven indicated weatherband frequencies.

   For a list of which areas receive which frequency, visit http://www.weather.gov/nwr/nwrbro.htm.

Charging

Charging a Device

1. Using the included charging cable, connect one end to the device and the other to the **Phone Charger** on the unit.
2. Pull out the **Dynamo Hand Crank.**
3. Turn the cranking handle at a speed of approximately 2 turns per second.
4. The device will charge slowly.

   Note: To charge an iPhone in an emergency situation, crank the handle continuously for 5-10 min.

Charging the Internal battery with the Dynamo Hand Crank

1. Make sure both the radio and the flashlight are turned to the Off position.
2. Pull out the **Dynamo Hand-Crank**.
3. Turn the cranking handle at a speed of approximately 2 turns per second.
4. The **Dynamo LED** will indicate charging.

   Turning the handle slower than the recommended speed will result in the battery not receiving a charge.

   NOTE: When using the unit for long periods of time, it is recommended to shut off both the flashlight and radio and recharge the battery to full capacity before continuing use.

   NOTE: To preserve the battery, charge the unit using the Dynamo Hand-Crank at least once a month.

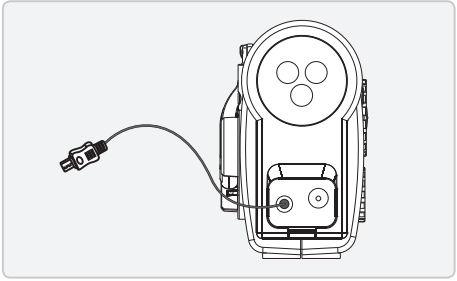

Charging the Internal Battery with an AC Adapter

1. Plug one end of an AC adapter (not included) into the unit and the other end into a standard AC outlet.

   NOTE: If you find the battery does not hold a charge or is difficult to charge by cranking, charging with an AC adaptor (not included) will help recondition the internal battery.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.weather-x.net.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.weather-x.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.weather-x.net.

Contact Information

Phone: 1-888-999-4215
Email: weatherxcustserv@weather-x.net
Parts Email: partsinfo@dpi-global.com
Website: www.weather-x.net

Green Initiative

MADE GREEN
protect for today • sustain for tomorrow

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'
On a continual basis DPI, Inc. is making efforts to sustain the environment and improve the recyclability of its products and packaging.

Focusing on "protecting for today and sustaining for tomorrow" DPI, Inc. has committed to reducing packaging size, increasing the usage of recyclable plastics, and ensuring that packaging and manuals are made with up to 85% recycled material. In addition to material consideration, DPI, Inc. has also focused on the finer details that positively impact the environment such as employing the usage of soy-based inks.

DPI, Inc. also ensures that the factories that produce the company's wide variety of consumer electronics adhere to environmentally friendly air and water restrictions. This is yet another example that every step of the way DPI, Inc. is making efforts to lessen any impact on the environment.

In 2011 DPI, Inc. also began conversations with Energy Star in order to ensure that the consumer electronics being produced meet high standards of energy efficiency. The ultimate goal is keeping energy costs for consumers low while providing quality, feature-rich products.

Copyright © 2011 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice